



VOLVO VNL HEADLIGHT ASSEMBLIES INSTALLATION INSTRUCTIONS

STEP 1: Raise the hood.

STEP 2:
Remove the tie wrap that is securing the power supply to the light housing.



STEP 3:
Disconnect the power supply line by unclipping the grey portion of the wire harness and squeezing the levers located on both ends of the black and grey plugs.
The grey connector acts as a lock mechanism so that the lever will not detach and disconnect while the light is operating.



STEP 4:
Remove the four bolts from the housing while an assistant holds the light in place



STEP 5:
Once the bolts are all removed, the assistant will be able to replace the headlight assembly with the new VNL LED Projector Headlight Assembly.
To install the new headlight, your assistant will need to hold the headlight in place while you pass the wire harness through the housing.



STEP 6:
Secure the new headlight with the same four bolts that were used to secure the original OEM headlight



STEP 7:

HEADLIGHT PLUG HEADLIGHT RESISTOR PLUG OEM PLUG



A) Connect Volvo headlight resistor to headlight plug.

B) Connect OEM plug from truck to Headlight resistor

STEP 8:
Once all four bolts are tightened, reconnect the wire harness and push down the grey connector to lock the harness connection.
To position the light beam, use a "Torx head socket" to adjust the screw as shown in the image.



Scan the QR Code to watch
the video on how to install.