READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR, RETAIN CENTER AND SIDES HARDWARE.
- 2- INSTALL THE CENTER BRACKETS ONTO THE CAB USING THE RETAINED HARDWARE.
- 3- TEMPORARILY INSTALL THE SUN VISOR ONTO THE CAB AS ILLUSTRATED.
- 4- USING THE SUN VISOR, MARK BRACKETS MISSING HOLES ON CAB.

CAUTION


REMOVE BRACKETS BEFORE DRILLING TO PREVENT DAMAGE


- 5- DRILL MARKED HOLES AT Ø ½" (.500").
- 6- INSERT THE WELLNUTS.
- 7- IF WITHOUT LIGHTS; SKIP TO STEP #12.
- 8- INSTALL THE LIGHTS ON SUN VISOR
- 9- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 10- FASTEN THE SUN VISOR AS ILLUSTRATED.
- 11- INSTALL AND CONNECT THE CENTRAL LIGHT TO THE OTHERS.
- 12- REINSTALL THE SUN VISOR ONTO THE CAB AS ILLUSTRATED.


CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 13- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 14- USE THE RETAINED HARDWARE TO SCREW BOTH SIDES.
- 15- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

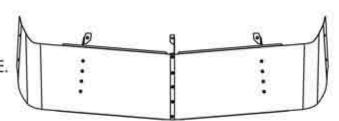

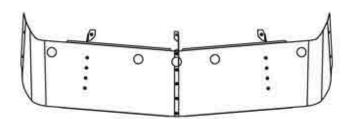

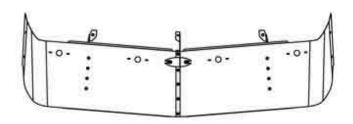


TRUX ACCESSORIES


TITLE

SUN VISOR FREIGHTLINER (MID ROOF)
COLUMBIA & CENTURY CLASS UP TO 2004

A	DWG, NO.	SUN-	21 &	F22
	NAME	DATE	REV	DAT

NAME	DATE	REV	DATE	
DRAWN BY P.W.	01-02-2007	PH1	100	
SCALE: 1:24	WEIGHT: LBS		SHEET: I OF I	

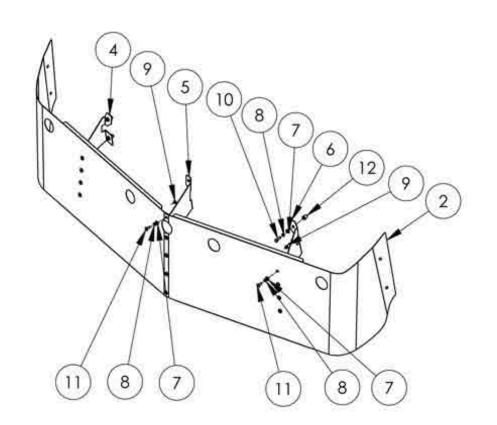

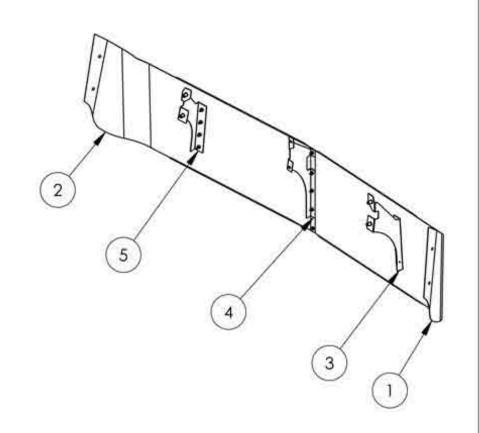

						-
ITEM NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY	
1	M7331024SD	M7331033SD	M7331034SD	SUN VISOR PANEL	1	
2	M7331024SG	M7331033SG	M7331034SG	SUN VISOR PANEL	1	1
3	K7331033-BH		-	HARDWARE KIT INCLUDES	1	1
4		¥	-	PR9331033-D00	1	1
5	27	2	U 8 1.	PR9331033-C00	1	1
6		=======================================	2	PR9331033-G00	.1.	
7	(%)	¥	9	FLAT WASHER 1/4"	17	S
8	:01	±	× 1	LOCK WASHER 1/4" SS	17	1
9	397	+:	-	HEX NUT 1/4-20NC	13	
10	:=:		-	HEX. BOLT 1/4NC X 1	4	1
-11		-		TRUSS PHILIPS 1/4"-20NCX3/4"SS	13	E
12	31	2	¥	WELL NUT 1/4NC	4	1

TRUX ACCESSORIES

SUN VISOR FREIGHTLINER (MID ROOF)
COLUMBIA & CENTURY CLASS UP TO 2004

TSUN-F21 & F22					
NAM	E DATE	REV	DATE		
PRODUCE ON BUILDING	01.02.2007	DILI			

WEIGHT: LBS

SHEET: 1 OF 1

SCALE: 1:16