

LOW ROOF/HIGH RISE
& DAY CAB

11" DROP FLAT GLASS

ITEM NO.	PART NO.	PART NO.	PART NO.	QTY	DESCRIPTION
1	M7431001SD	M7431028SD	M7431029SD	1	PANNEAU PARE-SOLEIL
2	M7431001SG	M7431028SG	M7431029SG	1	PANNEAU PARE-SOLEIL
3	K7431001BH	-	-	-	HARDWARE KIT INCLUDES:
4	-	-	-	1	PR9431001-G01
5	-	-	-	1	PR9431001-D01
6	-	-	-	1	PR9431001-D02
7	-	-	-	1	PR9431001-G02
8	-	-	-	13	TRUSS PHILIPS 1/4"-20NCX3/4"SS
9	-	-	-	4	WELL NUT 1/4"-20NC
10	-	-	-	13	HEX NUT 1/4-20NC
11	-	-	-	21	LOCK WASHER 1/4" SS
12	-	-	-	8	HEX. BOLT 1/4NC X 1
13	-	-	-	25	FLAT WASHER 1/4" SS
14	-	-	-	4	TRUSS PHILIPS 1/4-20NCX1"SS

TRUX ACCESSORIES

TITLE:
SUN VISOR
INTERNATIONAL 9000 SERIES UP TO 1998

SIZE DWG. NO.
A TSUN-12, TSUN-14, TSUN-13

NAME	DATE	REV	DATE
DRAWN BY P.W.	.8-09-2007	PH1	-
SCALE: 1:10		WEIGHT: LBS	SHEET: 1 OF 1

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR AND KEEP THE FASTENING HARDWARE.
- 2- INSTALL THE BRACKETS ONTO THE EXISTING HOLES OF THE TRUCK, AS ILLUSTRATED.
- 3- TEMPORARILY INSTALL THE SUN VISOR ON THE BRACKETS, AS ILLUSTRATED.
- 4- USING THE SUN VISOR, TO MARK BOTH END HOLES ON THE CAB.

CAUTION

REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 5- DRILL THE PREVIOUSLY MARKED HOLES AT ½ IN. DIA.
- 6- INSERT THE WELL NUTS IN THE HOLES. IF NO LIGHTS GO TO STEP # 12.

CAUTION




MODIFICATION ON TRUCK HARNESS, MAY BE REQUIRED TO CONNECT SUN VISOR HARNESS.

- 7- INSTALL THE LIGHTS ON LEFT AND RIGHT-HAND SIDE.
- 8- MAKE THE LIGHTS CONNECTION AND DIRECT WIRE TOWARDS THE CENTER.
- 9- INSTALL AND CONNECT THE CENTRAL LIGHT TO THE OTHER LIGHTS.
- 10- TEMPORARILY INSTALL THE SUN VISOR USING THE FASTENING HARDWARE, BUT DON'T COMPLETELY TIGHTEN FOR EASIER ADJUSTMENT. IF NO LIGHTS, GO TO STEP # 14.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 11- FINALY TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

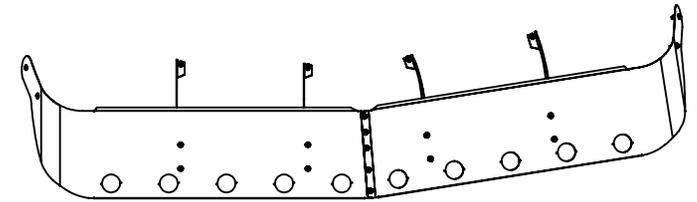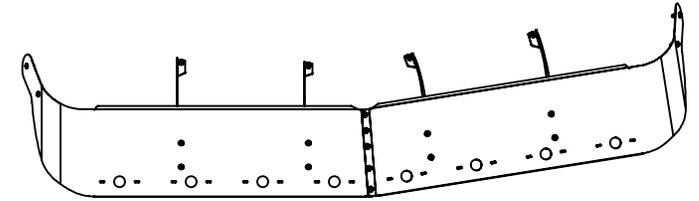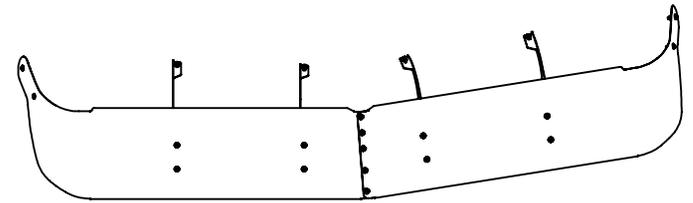

TRUX ACCESSORIES

TITLE:
SUN VISOR
INTERNATIONAL 9000 SERIES UP TO 1998

SIZE DWG. NO.
A TSUN-12, TSUN-14, TSUN-13

NAME	DATE	REV	DATE
DRAWN BY P.W.	.8-09-2007	PH1	-
SCALE: 1:24		WEIGHT: LBS	SHEET: 1 OF 1