

No. ARTICLE	NUMERO DE PIÈCE	DESCRIPTION	QTÉ
1	M7431030SD	SUN VISOR PANEL	1
2	M7431030SG	SUN VISOR PANEL	1
3	K7431030BH	HARDWARE KIT INCLUDES:	1
4	-	CL9431030-C01	1
5	-	CL9431030-G01	1
6	-	CL9431030-D01	1
7	-	CL9431030-U00	2
8	-	CL9431030-C02	1
9	-	CL9431030-G02	1
10	-	CL9431030-D02	1
11	-	LOCK WASHER 1/4" SS	30
12	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	26
13	B-HN14-20S	HEX NUT 1/4"-20NC	22
14	-	WELL NUT 1/4"-20NC	8
15	-	HEX. BOLT 1/4NC X 1	4
16	B-W14S	FLAT WASHER 1/4"	26

## TRUX ACCESSORIES

TITLE:

PARE SOLEIL

9000 SÉRIES DAY CAB 1999 & +

SIZE

A

TSUN-18 & 19

NAME	DATE	REV	DATE
DRAWN BY P.W.	17-07-2009	PH1	-
SCALE: 1:9		WEIGHT: LBS	SHEET: 1 OF 1

## READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

### INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR AND KEEP THE FASTENING HARDWARE.
- 2- INSTALL THE BRACKETS ONTO THE EXISTING HOLES OF THE TRUCK. (THE CENTRAL AND BOTH ENDS WITH RETAINED HARDWARE.
- 4- FASTEN THE SUN VISOR AND THE REMAINING BRACKETS AS ILLUSTRATED.
- 5- TEMPORARILY INSTALL THE SUN VISOR.
- 6- MARK BRACKETS MISSING HOLES AND BOTH ENDS HOLES.

#### CAUTION


#### REMOVE SUN VISOR TO PREVENT DAMAGE.

- 8- DRILL MARKED OUT HOLES AT  $\phi \frac{1}{2}$ " ( $\phi .5$ ) AND INSERT WELLNUTS.
- 10- INSTALL THE LIGHTS OF LEFT AND RIGHT-HAND SIDE.
- 11- MAKE THE CONNECTION OF THE LIGHTS AND DIRECT WIRE TOWARDS THE CENTER.
- 13- FASTEN THE SUN VISOR AS ILLUSTRATED.

#### CAUTION

**IT IS THE RESPONSABILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.**

- 14- REINSTALL THE SUN VISOR ON THE CAB.
- 15- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 16- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

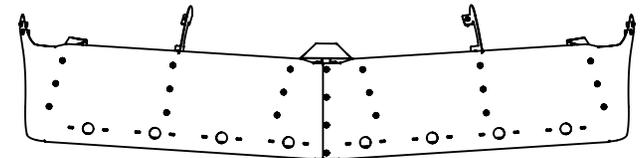

## TRUX ACCESSORIES

TITLE:

PARE SOLEIL

9000 SÉRIES DAY CAB 1999 & +

SIZE

A

TSUN-I8 & I9

NAME	DATE	REV	DATE
DRAWN BY P.W.	17-07-2009	PH1	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	