


Installation Instructions

Important Notice: To validate the warranty you must follow the instruction.

- ① Mount fender to truck's chassis as shown by using 3/4" fine pitch threaded bolts provided.

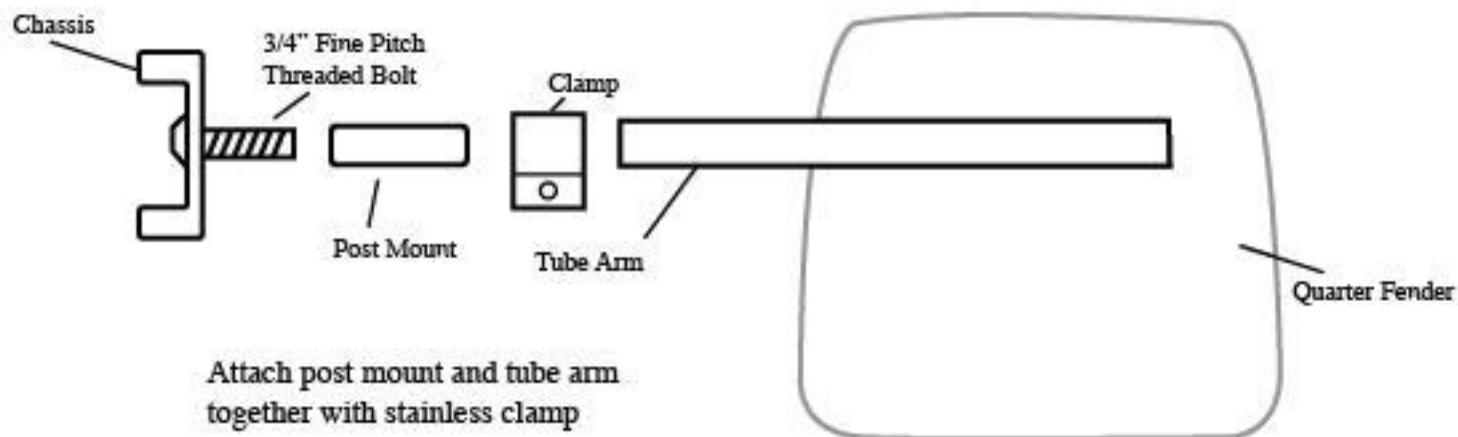

- ② Place Tube arm to fenders as shown. Attach bolts with strap on the underside of fender.

