

No. ARTICLE	NUMERO DE PIECE	DESCRIPTION	QTE
1	M7231018SG	SUN VISOR PANEL	1
2	M7231018SD	SUN VISOR PANEL	1
3	K7231018BH	HARDWARE KIT INCLUDES:	-
4	-	PR9231018-G01	1
5	-	PR9231018-G02	1
6	-	PR9231018-D01	1
7	-	PR9231018-D02	1
8	-	FLAT WASHER ID#10 X OD 1/2" SS	18
9	-	FLAT WASHER 1/4" SS	12
10	-	TRUSS PHILIPS 1/4-20NCX1"SS	4
11	-	HEX. BOLT 1/4NC X 1	8
12	-	LF,INSERT STL 1/4"-20NC X.160	12
13	-	TRUSS PHILLIPS #10-32NF X 1/2"SS	15
14	-	NYLON LOCK NUT #10-32NF SS	15


TRUX ACCESSORIES

TITLE:
SUN-VISOR

SIZE DWG. NO.
A TSUN-K20

NAME	DATE	REV	DATE
DRAWN BY P.W.	26-08-2013	PH1	-

SCALE: 1:8 WEIGHT: LBS SHEET: 1 OF 1

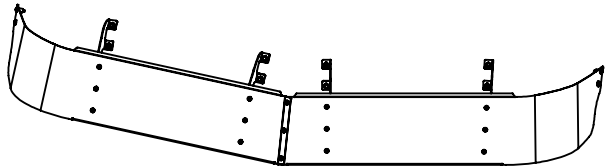

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- ON A TABLE PREASSEMBLE THE SUN VISOR PANEL & THE BRACKETS
- 2- TEMPORARILY INSTALL THE SUN VISOR AT THE PROPER POSITION.
- 3- USING THE SUN VISOR, MARK BRACKETS HOLES.

ATTENTION

REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 4- DRILL MARKED HOLES AT 25/64" (.390625") DIA.
- 5- INSTALL THE KNURLED THREADED INSERT 1/4"-20NC.
- 6- REINSTALL THE SUN VISOR ON THE CAB.
- 7- MARK BOTH ENDS HOLES OF SUN VISOR ON CAB.

ATTENTION

REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 8- DRILL MARKED HOLES AT 25/64" (.390625") DIA.
- 9- INSTALL THE KNURLED THREADED INSERT 1/4"-20NC.
- 10- REINSTALL THE SUN VISOR ON THE CAB.
- 11- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

TRUX ACCESSORIES			
TITLE:		SUN-VISOR	
		KENWORTH T680-T880	
SIZE	DWG. NO.		
A	TSUN-K20		
	NAME	DATE	REV
DRAWN BY	P.W.	26-08-2013	PH1
	SCALE: 1:24	WEIGHT: LBS	DATE
			-
			SHEET: 1 OF 1